

SPARE PARTS EXPLODED VIEW

GAS-WALL BOILER ATM. BURNER

Model

CLAS X



R8203475-09 - 18/03/2021

CLAS X



Gas-wall boiler atm. burner

1	3300866	CLAS X 24 CF NG	09-2016	-
2	3300864	CLAS X 24 FF NG	09-2016	-
2	3301335	CLAS X 24 FF NG	09-2018	01-2020
3	3300865	CLAS X 28 FF NG	09-2016	-
3	3301336	CLAS X 28 FF NG	09-2018	01-2020
4	3301320	CLAS X 35 FF NG	09-2018	-
5	3300867	CLAS X SYSTEM 24 CF NG	12-2016	-
6	3300868	CLAS X SYSTEM 28 CF NG	12-2016	-
7	3300869	CLAS X SYSTEM 24 FF NG	12-2016	-
8	3300870	CLAS X SYSTEM 28 FF NG	12-2016	-
9	3300871	CLAS X SYSTEM 32 FF NG	12-2016	-
Col	Reference	Model type	Begin	End

100
200
300
400

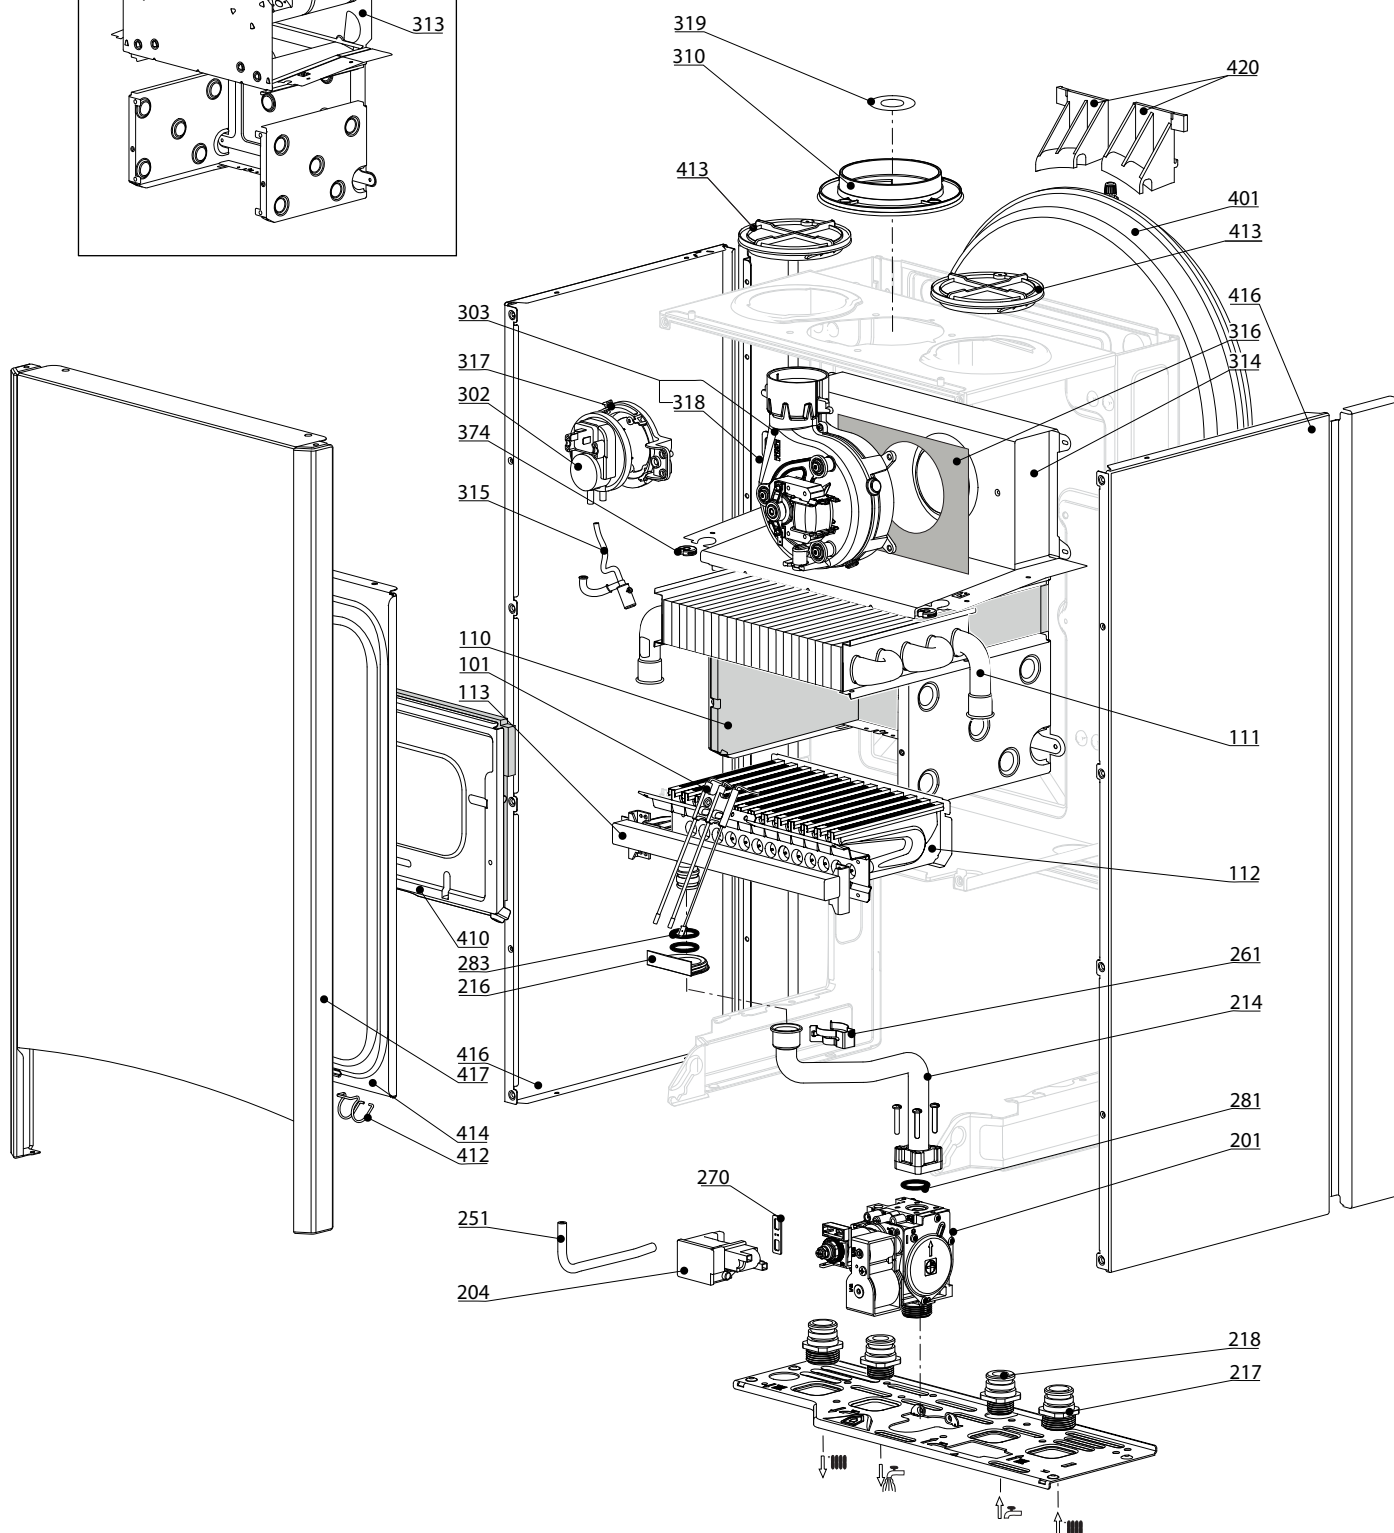
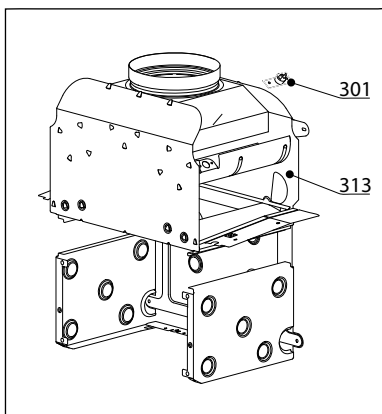


☰	Description	Manf. Pt. N	Type	CLAS X 24 CF CLAS X 24 FF CLAS X 28 FF CLAS X 35 FF CLAS X SYSTEM 24 CF CLAS X SYSTEM 28 CF CLAS X SYSTEM 24 FF CLAS X SYSTEM 32 FF																		From	to
				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
0100	BURNER ASSEMBLY																						
0101	ЭЛЕКТРОДЫ РОЗЖИГА/ИОНИЗАЦИИ	65115802		•	•	•	•	•	•	•	•	•	•										
0110	ТЕПЛОИЗОЛЯЦИЯ (КОМПЛЕКТ)	65104695		•		•		•				•											
	ТЕПЛОИЗОЛЯЦИЯ (КОМПЛЕКТ)	65105029					•		•			•											
	ТЕПЛОИЗОЛЯЦИЯ (КОМПЛЕКТ)	65106298			•						•												
0111	ОСНОВНОЙ ТЕПЛООБМЕННИК (Cu)	65104247		•				•															
	ОСНОВНОЙ ТЕПЛООБМЕННИК (Cu)	65105041					•						•										
	ОСНОВНОЙ ТЕПЛООБМЕННИК (Cu)	65111931							•														
	ОСНОВНОЙ ТЕПЛООБМЕННИК (KIT) Cu 24	65119090			•						•												
	ОСНОВНОЙ ТЕПЛООБМЕННИК (KIT) Cu 28	65119091				•						•											
0112	ГОРЕЛКА 11NP	65106294			•						•												
	ГОРЕЛКА 13NP	60001582		•				•															
	ГОРЕЛКА 13NP	65104220				•						•											
	ГОРЕЛКА 15NP	65105027							•														
	ГОРЕЛКА 16NP	60001596					•						•										
0113	ГАЗОВЫЙ КОЛЛЕКТОР 11 INJ. D:1.32	65106302	G20		•						•												
	ГАЗОВЫЙ КОЛЛЕКТОР 13 INJ. D:1.25	65104302	G20	•				•															
	ГАЗОВЫЙ КОЛЛЕКТОР 13 INJ. D:1.32	65104226	G20			•						•											
	ГАЗОВЫЙ КОЛЛЕКТОР 15 INJ. D:1.25	65105026	G20						•														
	ГАЗОВЫЙ КОЛЛЕКТОР 16 INJ. D:1.32	65105997	G20				•						•										
0200	GAS SECTION																						
0201	ГАЗОВЫЙ КЛАПАН	65115771		•	•	•	•	•	•	•	•	•	•										
0204	БЛОК РОЗЖИГА	65115791-01		•	•	•	•	•	•	•	•	•	•										
0214	ПАТРУБОК (ГАЗОВЫЙ КЛАПАН/ГОРЕЛКА)	65115772		•	•	•	•	•	•	•	•	•	•										
0216	УПЛОТНЕНИЕ	60000624		•	•	•	•	•	•	•	•	•	•										
0217	СН СОЕДИНЕНИЕ (3/4")	65114929		•	•	•	•	•	•	•	•	•	•										
0218	DWN СОЕДИНЕНИЕ (1/2")	65114930		•	•	•	•	•	•	•	•	•	•										
0251	ТРУБКА ЕРДМ	65115773		•	•	•	•	•	•	•	•	•	•										
0261	КЛИПСА	60001861		•	•	•	•	•	•	•	•	•	•										
0270	ПРОКЛАДКА БЛОКА РОЗЖИГА	574279		•	•	•	•	•	•	•	•	•	•										
0281	О-КОЛЬЦО 22.22X2.62	65104304		•	•	•	•	•	•	•	•	•	•										
0283	О-КОЛЬЦО 17.17X1.78	65104303		•	•	•	•	•	•	•	•	•	•										
0300	FAN ASSEMBLY																						
0301	ТЕРМОСТАТ 75-65°C	999539		•	•	•	•	•	•	•	•	•	•										
0302	ПНЕВМОРЕЛЕ 50 Pa	65104671-01			•						•												
	ПНЕВМОРЕЛЕ 74 Pa	65104672-01				•	•					•	•										
0303	ВЕНТИЛЯТОР 24 kW	65115813			•						•												
	ВЕНТИЛЯТОР 28-32 kW	65115814				•						•	•										
	ВЕНТИЛЯТОР 32-35 kW	65115815					•																
0310	ПАТРУБОК ПРИТОКА ВОЗДУХА	65115914			•	•	•	•			•	•	•										
0313	СТАБИЛИЗАТОР ТЯГИ 24 CF	65104218		•					•														
	СТАБИЛИЗАТОР ТЯГИ 28 CF	65105028								•													
0314	КАМЕРА СГОРАНИЯ 24 FF	65115800			•						•												
	КАМЕРА СГОРАНИЯ 28 FF	65115799				•						•											
	КАМЕРА СГОРАНИЯ 32/35 FF	65115798					•						•										
0315	КОНДЕНСАТООТВОДЧИК	65105349			•	•	•	•			•	•	•										
0316	ТЕПЛОИЗОЛЯЦИЯ ВЕНТИЛЯТОРА	65104305			•	•	•	•			•	•	•										
0317	КРОНШТЕЙН ПНЕВМОРЕЛЕ	65115812			•	•	•	•			•	•	•										
0318	ТРУБКА ВЕНТУРИ 15/24 FF	65106516			•						•												
	ТРУБКА ВЕНТУРИ 28/32 FF	65118171				•						•	•										
	ТРУБКА ВЕНТУРИ 32/35 FF	65118172					•						•										
0319	ДИАФРАГМА (KIT)	60001598		•	•	•	•	•	•	•	•	•	•										
0374	УПЛОТНЕНИЕ ДЛЯ КАБЕЛЯ	60000716		•	•	•	•	•	•	•	•	•	•										
0400	SEALED CASE																						
0401	РАСШИРИТЕЛЬНЫЙ БАК 8Л	65104261		•	•	•	•	•	•	•	•	•	•										
0410	ПАНЕЛЬ КАМЕРЫ СГОРАНИЯ	65104240		•		•		•				•											
	ПАНЕЛЬ КАМЕРЫ СГОРАНИЯ	65105033					•		•				•										
	ПАНЕЛЬ КАМЕРЫ СГОРАНИЯ	65106296			•						•												
0412	ПРУЖИНА ПЕРЕДНЕЙ ПАНЕЛИ (KIT)	65107048		•	•	•	•	•	•	•	•	•	•										
0413	ЗАГЛУШКА ПОДАЧИ ВОЗДУХА	65104249		•				•															
0414	ГЕРМЕТИЗИРУЮЩАЯ КРЫШКА	65105678-02			•	•					•	•											
	ГЕРМЕТИЗИРУЮЩАЯ КРЫШКА	65105679-02					•						•										
0416	ПАНЕЛЬ КОРПУСА (ЛЕВАЯ + ПРАВАЯ) - WHITE	65115804		•	•	•	•	•	•	•	•	•	•										
0417	ПАНЕЛЬ КОРПУСА (ПЕРЕДНЯЯ)	65115807					•		•		•		•										
	ПАНЕЛЬ КОРПУСА (ПЕРЕДНЯЯ)	65115808-01		•	•	•		•			•	•											
0420	КРОНШТЕЙН РАСШИРИТЕЛЬНОГО БАКА	65104696		•	•	•	•	•	•	•	•	•	•										

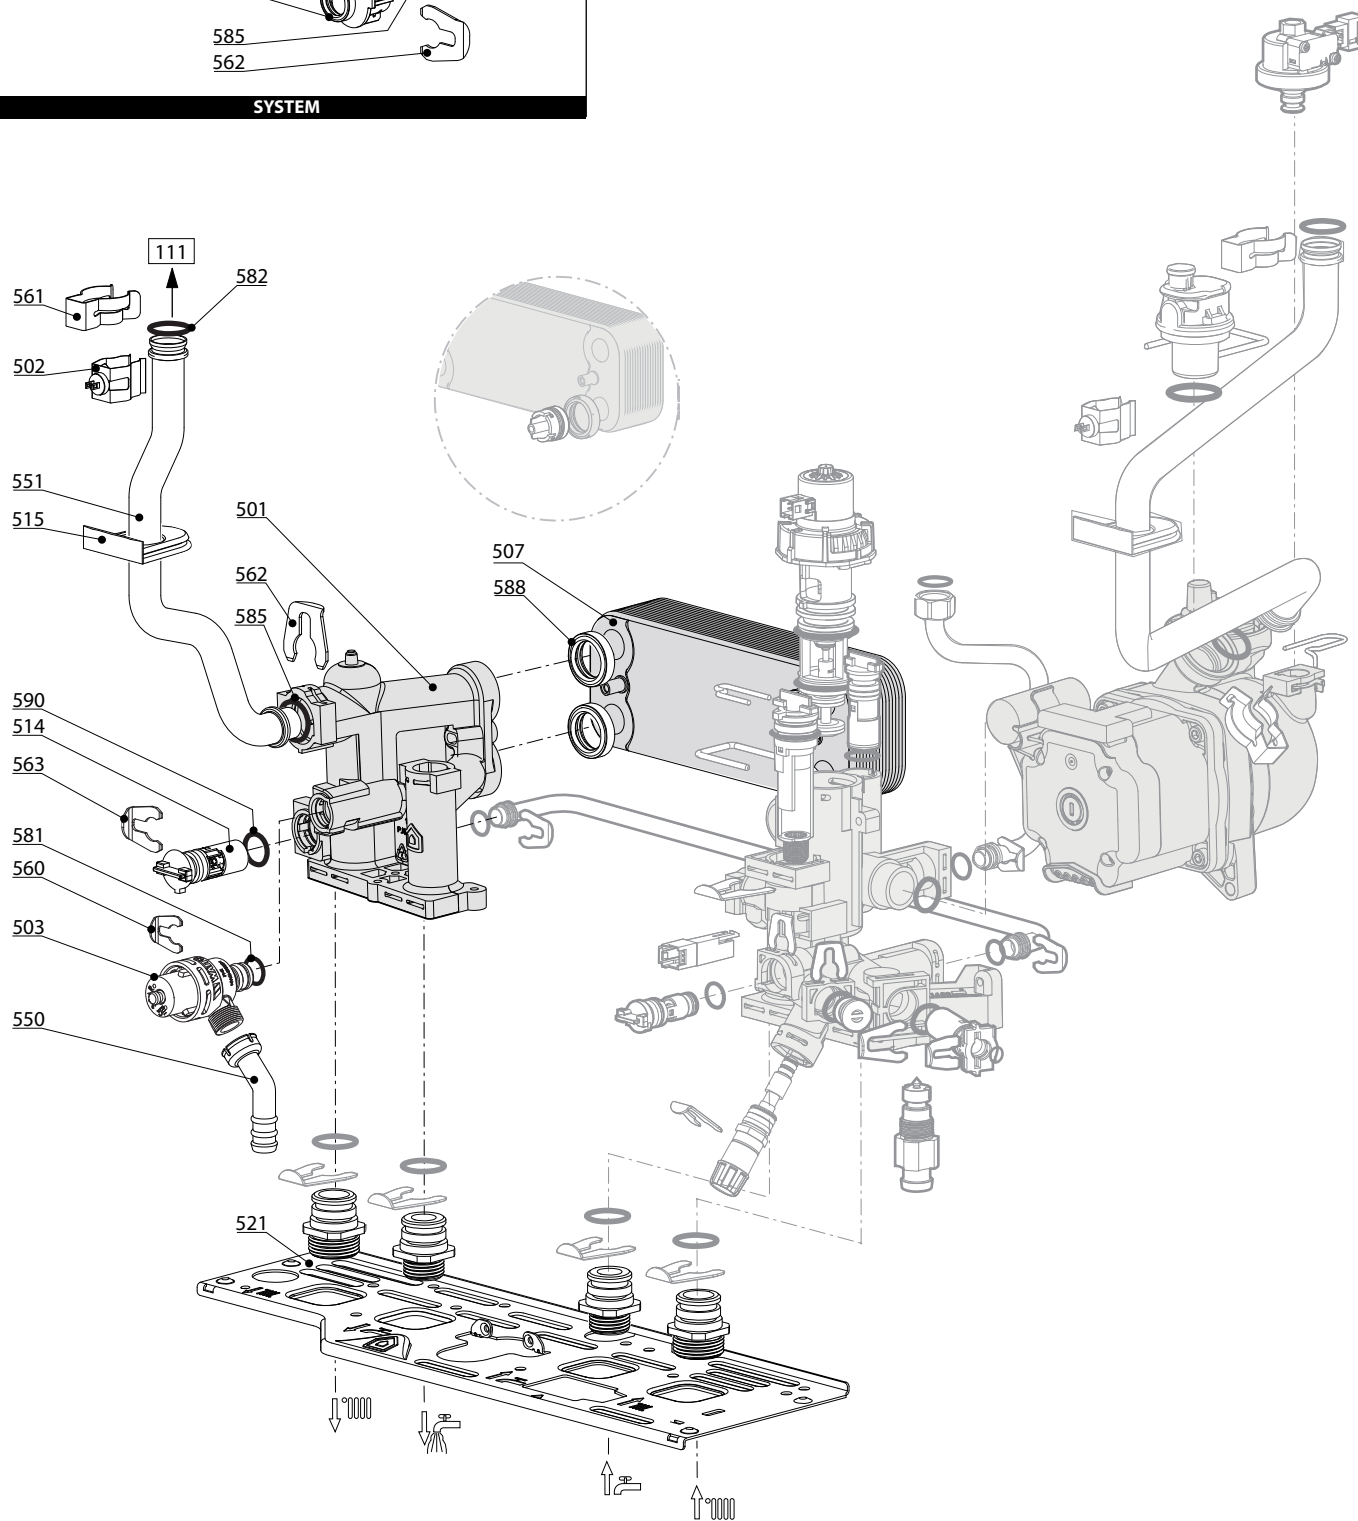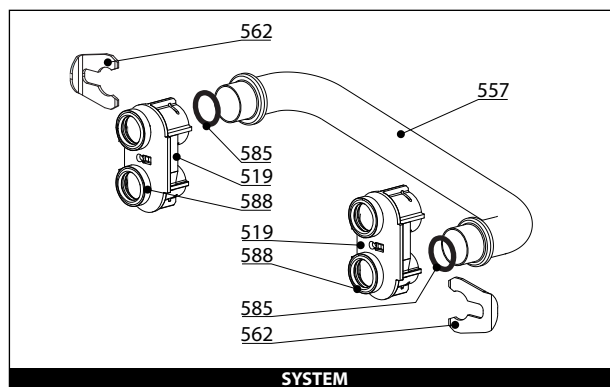

	Description	Manf. Pt. N	Type	CLAS X 24 CF CLAS X 24 FF CLAS X 28 FF CLAS X 35 FF CLAS X SYSTEM 24 CF CLAS X SYSTEM 28 CF CLAS X SYSTEM 24 FF CLAS X SYSTEM 28 FF CLAS X SYSTEM 32 FF																		31	
				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	From	to
0500	FLOW GROUP																						
0501	ГРУППА ПОДАЧИ	65115933		●	●	●	●														05/18		
	ГРУППА ПОДАЧИ	65115933						●	●	●	●	●											
	ГРУППА ПОДАЧИ	65117952		●	●	●	●												06/18				
0502	ДАТЧИК ТЕМПЕРАТУРЫ + КЛИПСА	990686-01		●	●	●	●	●	●	●	●	●	●										
0503	ПРЕДОХРАНИТЕЛЬНЫЙ КЛАПАН (3 БАРА)	61312668		●	●	●	●	●	●	●	●	●	●										
0507	ТЕПЛООБМЕННИК ГВС (16 ПЛАСТИН)	65104333		●	●	●	●																
0514	БАЙПАС	65114917		●	●	●	●	●	●	●	●	●	●										
0515	УПЛОТНЕНИЕ	60000808		●	●	●	●	●	●	●	●	●	●										
0519	ПЕРЕХОДНИК 'SYSTEM +' OPEN	60001365						●	●	●	●	●	●										
0521	ОСНОВАНИЕ ГИДРАВЛИЧЕСКОЙ ГРУППЫ	65115797		●	●	●	●	●	●	●	●	●	●										
0550	ПАТРУБОК ПРЕДОХРАНИТЕЛЬНОГО КЛАПАНА	60001955		●	●	●	●	●	●	●	●	●	●										
0551	ТРУБКА ПОДАЧИ ТЕПЛОНОСИТЕЛЯ (AL)	65115067	NOTA 2		●						●												
	ТРУБКА ПОДАЧИ ТЕПЛОНОСИТЕЛЯ (AL)	65115765	NOTA 2			●						●											
	ТРУБКА ПОДАЧИ ТЕПЛОНОСИТЕЛЯ (Cu)	65115763	NOTA 1	●		●		●				●											
	ТРУБКА ПОДАЧИ ТЕПЛОНОСИТЕЛЯ (Cu)	65115764	NOTA 1				●		●				●										
	ТРУБКА ПОДАЧИ ТЕПЛОНОСИТЕЛЯ (Cu)	65115915	NOTA 1		●					●													
0557	ТРУБКА (D.H.W.RETURN)	65115935						●	●	●	●	●	●										
0560	КЛИПСА D:10	65114933		●	●	●	●	●	●	●	●	●	●										
0561	КЛИПСА	61307589		●	●	●	●	●	●	●	●	●	●										
0562	КЛИПСА D:18	65104259		●	●	●	●	●	●	●	●	●	●										
0563	КЛИПСА D:12	65114932		●	●	●	●	●	●	●	●	●	●										
0581	О-КОЛЬЦО 17.96X2.62	65104337		●	●	●	●	●	●	●	●	●	●										
0582	О-КОЛЬЦО 17.86X2.62	61308091		●	●	●	●	●	●	●	●	●	●										
0585	О-КОЛЬЦО 17.04X3.53	65104262		●	●	●	●	●	●	●	●	●	●										
0588	ПРОКЛАДКА ТЕПЛООБМЕННИКА	65114928		●	●	●	●	●	●	●	●	●	●										
0590	О-КОЛЬЦО 11.91X2.62	65114940		●	●	●	●	●	●	●	●	●	●										



Note 1: For appliances with main exchanger in copper. - Note 2: For appliances with main exchanger in aluminium.

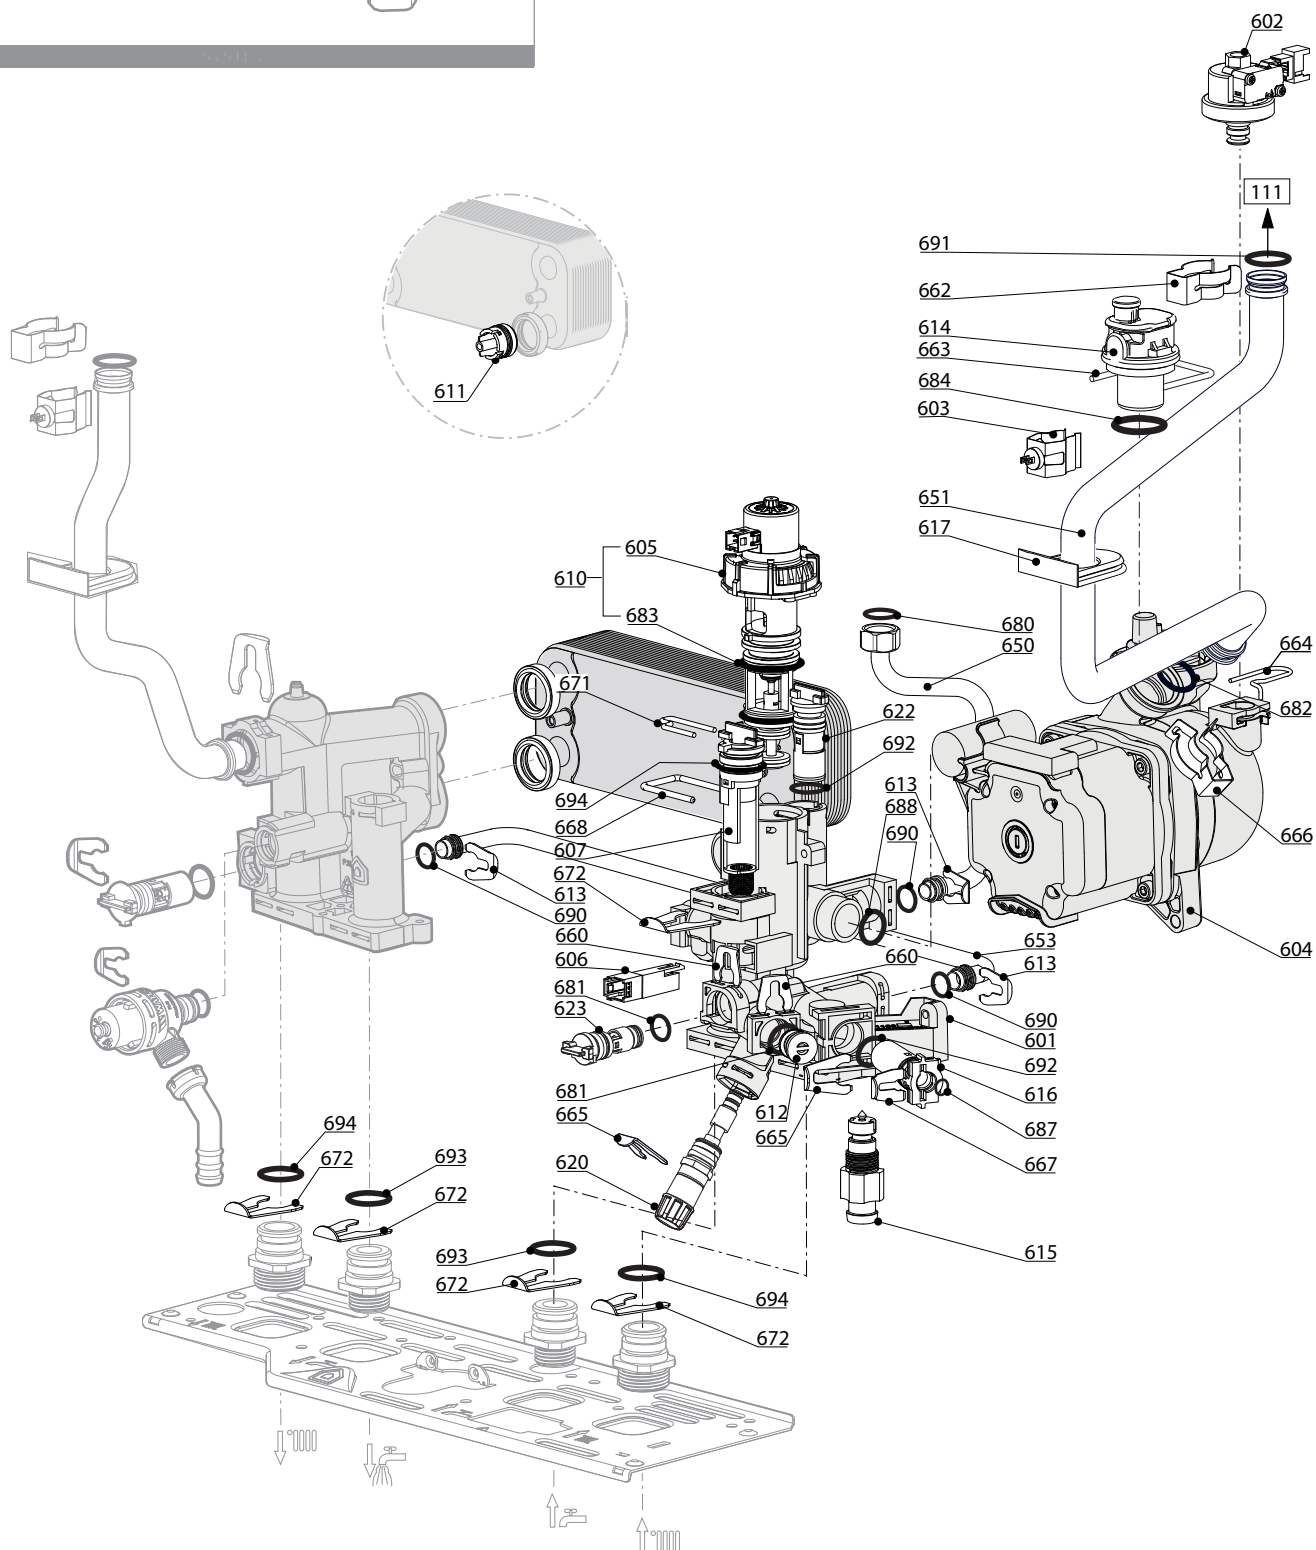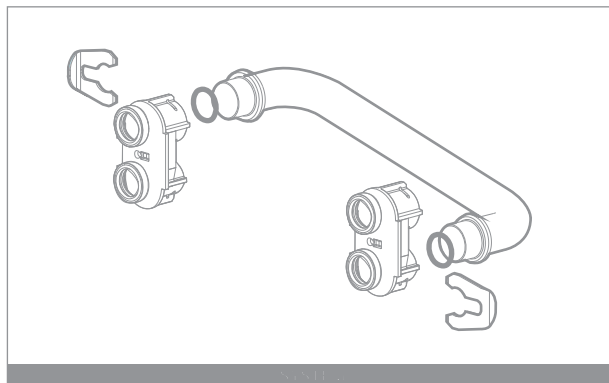


	Description	Manf. Pt. N	Type	CLAS X 24 CF CLAS X 24 FF CLAS X 28 FF CLAS X 35 FF CLAS X SYSTEM 24 CF CLAS X SYSTEM 28 CF CLAS X SYSTEM 24 FF CLAS X SYSTEM 28 FF CLAS X SYSTEM 32 FF																		31	
				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	From	to
0600	RETURN GROUP																						
0601	ГРУППА ВОЗВРАТА	65119770-01		●	●	●	●														06/18		
	ГРУППА ВОЗВРАТА	65119772-01						●	●	●	●	●											
	ГРУППА ВОЗВРАТА	65120137		●	●	●	●															05/18	
0602	РЕЛЕ ДАВЛЕНИЯ	65115792		●	●	●	●	●	●	●	●	●	●										
0603	ДАТЧИК ТЕМПЕРАТУРЫ + КЛИПСА	990686-01		●	●	●	●	●	●	●	●	●	●										
0604	НАСОС 5М 2V WILO	65104319-01	WILO	●	●	●	●	●	●	●	●	●	●										
0605	МОТОР 3-Х ХОДОВОГО КЛАПАНА	65114936		●	●	●	●	●	●	●	●	●	●										
0606	ДАТЧИК ПРОТОКА (ГЕРКОН)	65114921-01		●	●	●	●																
0607	ДАТЧИК ПРОТОКА (ПОПЛАВОК)	65114919		●	●	●	●	●	●	●	●	●	●										
0610	3-Х ХОДОВОЙ КЛАПАН + МОТОР (KIT)	65114924		●	●	●	●	●	●	●	●	●	●										
0611	ОГРАНИЧИТЕЛЬ ПРОТОКА (KIT)	65116836		●	●	●	●																
0612	ЗАГЛУШКА	65114920		●	●	●	●	●	●	●	●	●	●										
0613	КЛИПСА D:10	65104260		●	●	●	●	●	●	●	●	●	●										
0614	АВТОМАТ. ВОЗДУХООТВОДЧИК WILO	65104703	WILO	●	●	●	●	●	●	●	●	●	●										
0615	КРАН СЛИВА	65114922		●	●	●	●	●	●	●	●	●	●										
0616	ВОДЯНОЙ ФИЛЬТР	65114923		●	●	●	●	●	●	●	●	●	●										
0617	УПЛОТНЕНИЕ	60000807		●	●	●	●	●	●	●	●	●	●										
0620	КРАН ПОДПИТКИ	65119771		●	●	●	●	●	●	●	●	●	●										
0622	БАЙПАС	65114917		●	●	●	●																
0623	ОБРАТНЫЙ КЛАПАН	65114918-01		●	●	●	●	●	●	●	●	●	●										
0650	ТРУБКА РАСШИРИТЕЛЬНОГО БАКА	65115068		●	●	●	●	●	●	●	●	●	●										
0651	ТРУБКА ВОЗВРАТА ТЕПЛОНОСИТЕЛЯ (AL)	65115069	NOTA 2		●						●												
	ТРУБКА ВОЗВРАТА ТЕПЛОНОСИТЕЛЯ (AL)	65115768	NOTA 2			●						●											
	ТРУБКА ВОЗВРАТА ТЕПЛОНОСИТЕЛЯ (Cu)	65115769							●														
	ТРУБКА ВОЗВРАТА ТЕПЛОНОСИТЕЛЯ (Cu)	65115770		●				●															
	ТРУБКА ВОЗВРАТА ТЕПЛОНОСИТЕЛЯ (Cu)	65115767	NOTA 1				●						●										
	ТРУБКА ВОЗВРАТА ТЕПЛОНОСИТЕЛЯ (Cu)	65115916	NOTA 1			●						●											
	ТРУБКА ВОЗВРАТА ТЕПЛОНОСИТЕЛЯ (Cu)	65115928	NOTA 1		●					●													
0653	ПАТРУБОК БАЙПАСА	65116210		●	●	●	●															05/18	
	ПАТРУБОК БАЙПАСА	65116210						●	●	●	●	●	●										
0660	КЛИПСА D:10	65114933		●	●	●	●	●	●	●	●	●	●										
0662	КЛИПСА	61307589		●	●	●	●	●	●	●	●	●	●										
0663	U-КЛИПСА	65104704		●	●	●	●	●	●	●	●	●	●										
0664	КЛИПСА	65104322		●	●	●	●	●	●	●	●	●	●										
0665	КЛИПСА D:12	65114932		●	●	●	●	●	●	●	●	●	●										
0666	КЛИПСА	60000309		●	●	●	●	●	●	●	●	●	●										
0667	КЛИПСА D:6	65100680		●	●	●	●	●	●	●	●	●	●										
0668	КЛИПСА	65114927		●	●	●	●	●	●	●	●	●	●										
0671	КЛИПСА	65114926		●	●	●	●	●	●	●	●	●	●										
0672	КЛИПСА D:19	65114931		●	●	●	●	●	●	●	●	●	●										
0680	ПРОКЛАДКА 3/8"	573521		●	●	●	●	●	●	●	●	●	●										
0681	O-КОЛЬЦО 9.9X2.62	65114937		●	●	●	●	●	●	●	●	●	●										
0682	O-КОЛЬЦО 17.04X3.53	65104262		●	●	●	●	●	●	●	●	●	●										
0683	O-КОЛЬЦО 23.47X2.62	65114939		●	●	●	●	●	●	●	●	●	●										
0684	O-КОЛЬЦО 3X35 EPDM 75 SH	65104705		●	●	●	●	●	●	●	●	●	●										
0687	O-КОЛЬЦО 5.7X1.9	61009834-10		●	●	●	●	●	●	●	●	●	●										
0688	O-КОЛЬЦО 21.89X2.62	65104320		●	●	●	●	●	●	●	●	●	●										
0690	O-КОЛЬЦО 8.9X2.7	61009834-14		●	●	●	●	●	●	●	●	●	●										
0691	O-КОЛЬЦО 17.86X2.62	61308091		●	●	●	●	●	●	●	●	●	●										
0692	O-КОЛЬЦО 11.91X2.62	65114940		●	●	●	●	●	●	●	●	●	●										
0693	O-КОЛЬЦО 15.88X2.62	65114941		●	●	●	●	●	●	●	●	●	●										
0694	O-КОЛЬЦО 17.13X2.62	65114938		●	●	●	●	●	●	●	●	●	●										

Note 1: For appliances with main exchanger in copper. - Note 2: For appliances with main exchanger in aluminium.

800

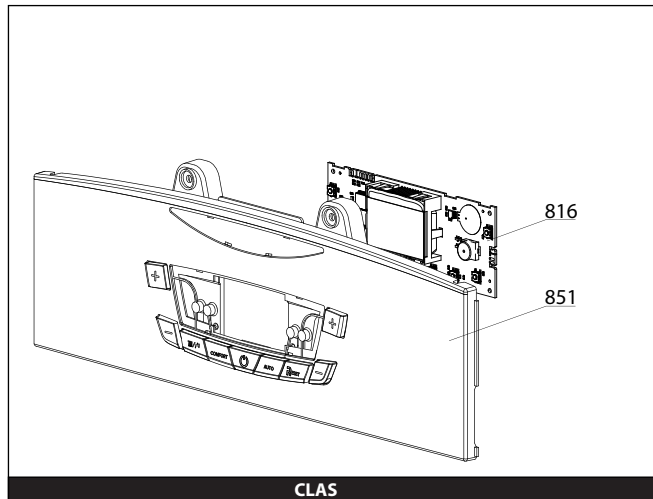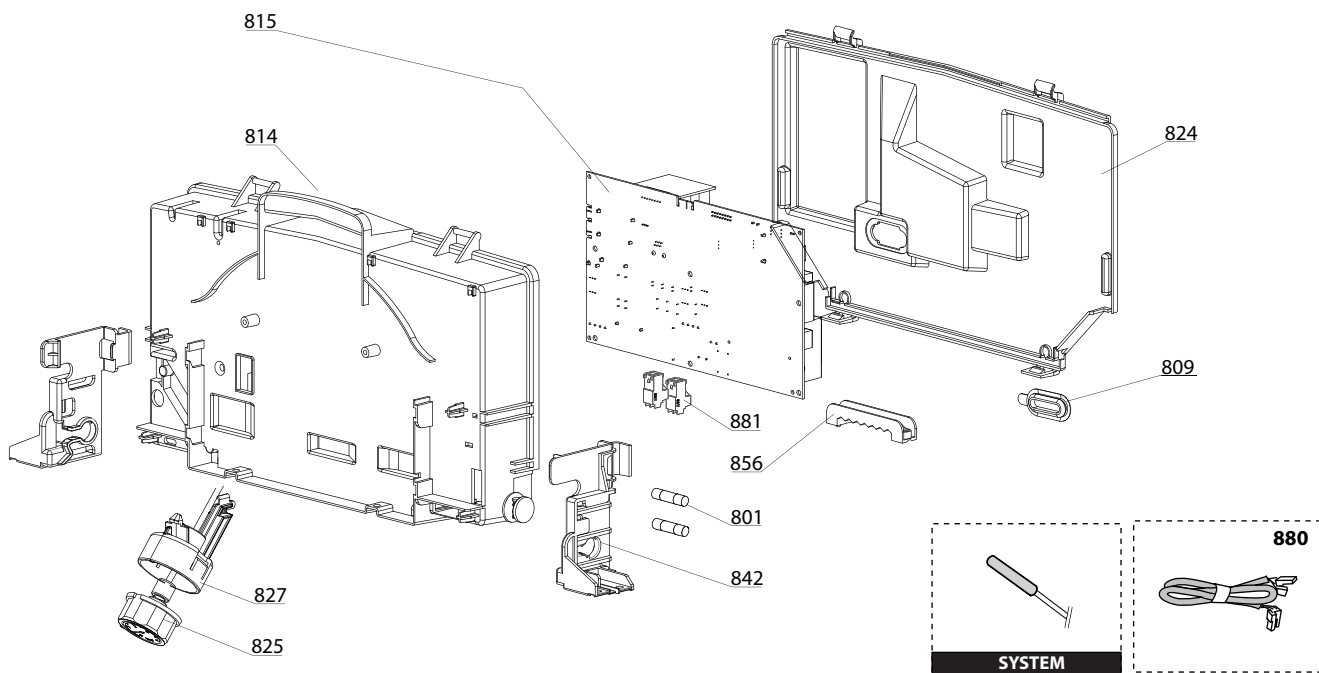

900

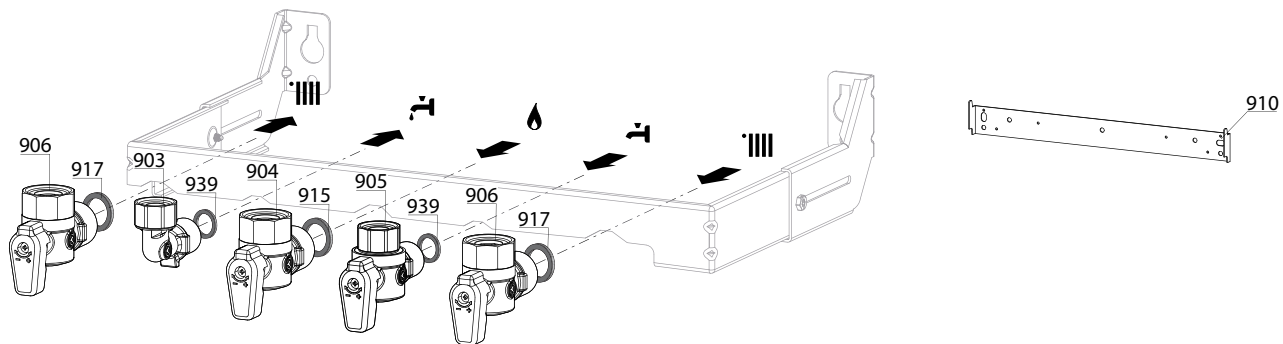

5000

5001
Transf. gaz
Conv. gas
Trasf. gas
Transf. gas
> G31
(LPG - GPL)

5002
Transf. gaz
Conv. gas
Trasf. gas
Transf. gas
> G20
(NAT - MET)

Accessories 5020
Options
Opzioni
Accessorio
Zubehör
Opties

☰	Description	Manf. Pt. N	Type	CLAS X 24 CF CLAS X 24 FF CLAS X 28 FF CLAS X 35 FF CLAS X SYSTEM 24 CF CLAS X SYSTEM 28 CF CLAS X SYSTEM 24 FF CLAS X SYSTEM 28 FF CLAS X SYSTEM 32 FF																		31	
				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	From	to
0800	ELECTRICAL BOX																						
0801	ПРЕДОХРАНИТЕЛЬ 5X20 RIT. 2 A 250V	65112137		•	•	•	•	•	•	•	•	•	•										
0809	ЗАГЛУШКА (PCD TOOL ACCESS)	998382		•	•	•	•	•	•	•	•	•	•										
0814	КОРПУС БЛОКА УПРАВЛЕНИЯ (FRONT)	65115784		•	•	•	•	•	•	•	•	•	•										
0815	ОСНОВНАЯ ПЛАТА	65115783-04		•	•	•	•	•	•	•	•	•	•										
0816	ПЛАТА ДИСПЛЕЯ	65115776-02		•	•	•	•	•	•	•	•	•	•										
0824	КОРПУС БЛОКА УПРАВЛЕНИЯ (REAR)	65115785		•	•	•	•	•	•	•	•	•	•										
0825	МАНОМЕТР (0-4 БАР)	65114200		•	•	•	•	•	•	•	•	•	•										
0827	КРОНШТЕЙН МАНОМЕТРА	65115809		•	•	•	•	•	•	•	•	•	•										
0842	БОКОВОЙ ФИКСАТОР ПАНЕЛИ УПРАВЛЕНИЯ	65115810					•		•				•										
	БОКОВОЙ ФИКСАТОР ПАНЕЛИ УПРАВЛЕНИЯ	65115811		•	•	•		•		•	•	•											
0851	ПАНЕЛЬ УПРАВЛЕНИЯ В СБОРЕ	65115774					•		•				•										
	ПАНЕЛЬ УПРАВЛЕНИЯ В СБОРЕ	65115775		•	•	•		•		•	•	•											
0856	ЗАЖИМ ДЛЯ КАБЕЛЯ	65103377		•	•	•	•	•	•	•	•	•	•										
0879	ДАТЧИК БОЙЛЕРА	60000454						•	•	•	•	•	•										
0880	КАБЕЛЬ 3-Х ХОДОВОГО КЛАПАНА	65115790		•	•	•	•																
	КАБЕЛЬ 3-Х ХОДОВОГО КЛАПАНА	65115937						•	•	•	•	•	•										
	КАБЕЛЬ ЭЛЕКТРОДА ИОНИЗАЦИИ	60001883		•	•	•	•	•	•	•	•	•	•										
	КАБЕЛЬ ДИСПЛЕЯ (5 WIRES BLUES)	60000746		•	•	•	•	•	•	•	•	•	•										
	КАБЕЛЬ ЗАЗЕМЛЕНИЯ	65104286		•	•	•	•	•	•	•	•	•	•										
	КАБЕЛЬ ВЕНТИЛЯТОРА	60001902			•	•	•	•			•	•	•										
	КАБЕЛЬ ПИТАНИЯ 240V	60001619		•	•	•	•	•	•	•	•	•	•										
	КАБЕЛЬ ДАТЧИК ТЕМП. - ПНЕВМОРЕЛЕ	65115787			•	•	•	•			•	•	•										
	КАБЕЛЬ ДАТЧИК ТЕМП. - ПНЕВМОРЕЛЕ	65115789		•				•	•														
	КАБЕЛЬ НАСОСА 2V 5M WILO	65104520	WILO	•	•	•	•	•	•	•	•	•	•										
0881	КОННЕКТОР 2P	65111933		•	•	•	•	•	•	•	•	•	•										
	КОННЕКТОР 3P (x5)	65111934-01		•	•	•	•	•	•	•	•	•	•										
0900	JIG PLATE & PIPE FITTING																						
0903	ПАТРУБОК ГВС	60000891		•	•	•	•	•	•	•	•	•	•										
0904	КРАН ГАЗА	60000898		•	•	•		•	•														
	КРАН ГАЗА	65119353			•	•	•	•			•	•	•										
0905	КРАН ХОЛОДНОЙ ВОДЫ	60000894		•	•	•	•	•	•	•	•	•	•										
0906	КРАН ПОДАЧИ/ВОЗВРАТА ТЕПЛОНОСИТЕЛЯ	60000885		•	•	•	•	•	•	•	•	•	•										
0910	КРОНШТЕЙН	60000625		•	•	•	•	•	•	•	•	•	•										
0915	ПРОКЛАДКА КРАНА ГАЗА	65119354		•	•	•	•	•	•	•	•	•	•										
0917	ПЛОСКАЯ ПРОКЛАДКА D:24-17-1.5	60061855-19		•	•	•	•	•	•	•	•	•	•										
0939	ПЛОСКАЯ ПРОКЛАДКА D:18.4-12.2-1.5	60061855-14		•	•	•	•	•	•	•	•	•	•										
5000	ACCESSORIES																						
5001	К-Т ПЕРЕВОДА НА СЖИЖЕННЫЙ ГАЗ (LPG)	65104582-01			•	•					•	•											
	К-Т ПЕРЕВОДА НА СЖИЖЕННЫЙ ГАЗ (LPG)	65106690-01		•				•	•														
	К-Т ПЕРЕВОДА НА СЖИЖЕННЫЙ ГАЗ (LPG)	65106695-01					•						•										
5002	К-Т ПЕРЕВОДА НА ПРИРОДНЫЙ ГАЗ (NG)	65104583-01			•	•	•	•			•	•	•										
	К-Т ПЕРЕВОДА НА ПРИРОДНЫЙ ГАЗ (NG)	65106691-01		•				•	•														
5020	ОГРАНИЧИТЕЛЬ ПРОТОКА (KIT)	65116836		•	•	•	•																

LIST OF THE ABBREVIATIONS

HW	: Hot water.
CW	: Cold water.
C	: Ceramic resistance (normal heating).
Ca	: Ceramic resistance (accelerated heating)
TP	: Immersion heater.
1F	: With fittings.
2F	: Without fittings.
3F	: With fittings and another outlet connection.
AMI	: With mixing valve.
SMI	: Without mixing valve.
PUISS	: Power of th appliance.
PN	: Appliance with normal pression.
LP	: Appliance with low pression.
PV	: Appliance with variable power.
PF	: Appliance with fixed power.

IDENTIFICATION PLATE

SERIAL NUMBER

10 Characters :	04 05 125 011	
		Sequential number
		Manufacturing day
		Year of manufacture
11 Characters :	1 95 065004 - 31	
Month of manufacture : from 1 to 9 → Jan. to Sep., O → Oct., N → Nov., D → Dec.		Technical number of the appliance
		Sequential number
		Year of manufacture
19 Characters :	08 05 0013199 900640031	
Year of manufacture		Product reference
Month of manufacture		Sequential number
20 Characters :	3675007 XX 2 07 070 00315	
Product reference		Sequential number
Millenium of manufacture		Manufacturing day
		Year of manufacture
21 Characters :	3675007 XX 07 070 0000315	
Product reference		Sequential number
Year of manufacture		Manufacturing day